



AMERICAN CHAMPION AIRCRAFT
CORPORATION

"Dedicated to Preserving a Classic"

FLIGHT OPERATIONS MANUAL

FOR

***CITABRIA MODEL
7GCAA***

Weight & Balance Maintenance Data (to be completed by a Weight and Balance Control Officer (WBCO))		Revision and Re-issue Required SUBJECT TO C.A.O. 100.7									
Weight and Balance Report Ref: WB-3730		Empty Weight and Empty Weight CG									
Centre of Gravity Position (CG) is LONGITUDINAL		Configuration: TWO SEATS TOTAL DRAINABLE UNUSABLE FUEL & FULL ENGINE OIL									
measured AFT of datum		Weight (kg) Arm (mm) Index 561.6 307 172505									
Aircraft Longitudinal Datum		Maximum & Minimum Empty Weight & Empty Weight CG Revision and Reissue by WBCO is required when calculated running totals are									
Wing Leading Edge		<table border="1"> <tr> <td>Weight (kg)</td> <td>Arm (mm)</td> </tr> <tr> <td>MORE THAN</td> <td>571.6</td> </tr> <tr> <td>or LESS THAN</td> <td>551.6</td> </tr> <tr> <td></td> <td>302</td> </tr> </table>		Weight (kg)	Arm (mm)	MORE THAN	571.6	or LESS THAN	551.6		302
Weight (kg)	Arm (mm)										
MORE THAN	571.6										
or LESS THAN	551.6										
	302										
DATE 26-Jun-06 WEIGHT CONTROL AUTHORITY AQ45		DATE 26-Jun-06									

Part B - Record of Empty Weight and Balance
(the person co-ordinating maintenance shall ensure that Part B is calculated and recorded in accordance with CAO 100.7)

[illegible]

WEIGHT AND BALANCE RECORD

American Champion Aircraft Corp.
Rochester, Wisconsin


<p>FAA Approved</p> <p>Airplane Flight Manual</p> <p>Citabria Adventurer Model 7GCAA</p>
--

This manual is eligible only for 7GCAA aircraft, serial numbers 400-97 and up.

Registration Number: VH-ZCA

Serial Number: 504-2006

**This manual is part of the required equipment
and must remain in the airplane at all times.**

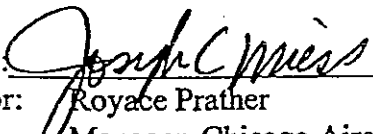Approved:  Date: 11/01/00
For: Royce Prather
Manager, Chicago Aircraft Certification Office

Revisions:

Letter	By	Date	Revisions	Pages Affected
A	JKM	10-13-2000	Revised to include new 1750 lbs. gross weight changes and limitations	All

Citabria Model 7GCAA

Flight Operations

All 7GCAA models are approved in the Normal and Acrobatic Category. Day or night flight in VFR conditions only is approved providing the aircraft is equipped with the required equipment and is in operating condition as specified under Part 91 of the Federal Air Regulations. Flight into known icing condition is prohibited

<u>Airspeed Limitations</u>	<u>CAS (mph)</u>
Never Exceed (red line)	162
Caution Range (yellow arc)	120 - 162
Maximum Structural Cruise.....	120
Normal Operating Range (green arc).....	50 - 120
Maneuvering @ 1750.....	120
Stall Speed	52
Best Rate of Climb Speed (Sea Level)	77

CAS - Calibrated airspeed is indicated airspeed corrected for installation and instrument error

Weight and Balance Limits

Consult aircraft records for weight and balance data for this aircraft.

Aircraft Weight and Center of Gravity Range (inches)

<u>Weight</u>	<u>Normal Category</u>	<u>Acrobatic Category</u>
1750 lbs. maximum	14.2 - 18.2	14.2 - 16.3
1325 lbs. or less	10.5 - 18.2	10.5 - 16.3

All measurements are aft of the datum line which is the wing leading edge. Center of gravity limits have straight line variation between these points.

Flight Load Factors (1750 lbs. normal or acrobatic category)

Positive Load Factor+ 5.0 g's maximum
 Negative Load Factor- 2.0 g's maximum

Do not exceed 135 mph IAS during negative g-load condition.
 Do not perform acrobatics in turbulent air.

11/11/00

Citabria Model 7GCAA

Maneuvers**Landplane Approved For Only The Following Acrobatic Maneuvers**

Maneuver	Entry Speed IAS	
	MPH	Knots
Chandelle, Lazy Eight	120	104
Barrel or Slow Roll	120	104
Immelmann	145	126
Loop or Clover Leaf	140	122
Split S	80	70
Snap Roll	85	74
Hammerhead Turn	140	122
Cuban Eight	145	126
Spin	Slow Deceleration	

Do not exceed +5.0 or -2.0 g-load factor. Do not exceed 135 mph IAS during negative g-load condition. Do not perform acrobatics in turbulent air. Caution: negative g flight will cause loss of oil and oil pressure. To recover from spin use full opposite rudder and neutralize elevator.

Powerplant Limitations

Engine, Lycoming	O-320-B2B
Rated Horsepower (HP / RPM)	160 / 2700
Fuel, Aviation Grade, Min. Octane	91 / 96
Tachometer	
Normal Range (green arc - RPM)	1800 - 2700
Maximum (red line - RPM)	2700
Cylinder Head Temperature	
Maximum (red line - °F)	500
Oil Temperatures	
Normal Range (green arc - °F)	100 - 245
Maximum (red line - °F)	245

11/01/00

Citabria Model 7GCAA

Powerplant Limitations (Continued)

Oil Pressure

Normal Range (green arc - psi)	60 - 100
Caution Range (yellow arc - psi)	25 - 60
Maximum (red line - psi)	100
Minimum (red line - psi)	25

Other Operating Information

Occupy front seat when flying solo.

Fuel 35 gal. useable, fuel 'on' when handle is down.

Maximum baggage - 100 lbs. Do not carry baggage during aerobatics.

Folding rear seat, seat back restrainer cable must be connected before flight unless rear control stick is removed.

Turn off strobe lights when taxiing in vicinity of other aircraft or during flight through clouds, fog, or haze. Standard position lights to be on for all night operations.

Alternator output circuit breaker located on cross member behind instrument panel.

Emergency door hinge release - pull pin, pull lever

Left window may be used as an alternate emergency exit - force window outward past forward stop mechanism.

Do not open forward left side window above 130 mph, or above 90 mph if the window is full opening.

Service battery every 50 hours of normal flight. Service every 10 hours of acrobatic flight

11/01/00

Citabria Model 7GCAA

Noise Characteristics

The noise level for this airplane measured in accordance with FAR 36, Appendix G is 69.72 dB(A) at full throttle.

The noise level for this airplane measured in accordance with ICAO, Annex 16, Chapter 10, Appendix 6 is 71.226 dB(A) at full throttle.

No determination has been made by the Federal Aviation Administration that the noise levels of this airplane are or should be acceptable or unacceptable for operation at, into, or out of, any airport.

11/01/00


11 PARADISE COURT
CLONTARF
QLD. AUSTRALIA 4019

Phone : (07) 3283 3817
Fax: (07) 3319 6171
Mobile 0439 328 338

LOAD DATA SHEET

D. MacArthur & Associates

(NAME OF ORGANISATION)

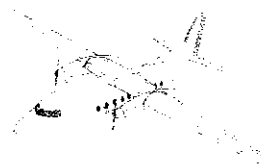


Aircraft Type Citabria Adventurer 7GCAA S/N 504-2006 Aircraft Reg VH-ZCA

Approved loading system Approved Flight Manual & Pilots Operating Manual

AUTHORISED	DATE	DATE OF EXPIRY	ISSUE
D. J. MacArthur	26-Jun-06	INDEFINITE SUBJECT TO C.A.O. 100.7	ONE

This LOAD DATA SHEET
has been prepared by the
VALIDATION
of cumulative data and not
by weighing the aircraft.

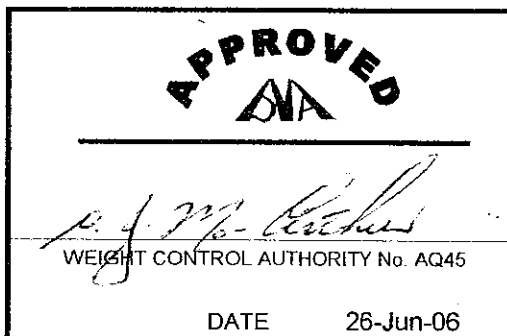

ITEM	WEIGHT Kg	ARM mm	MOMENT	INDEX * (IU)	CONFIGURATION (ALSO SEE EQUIPMENT LIST)
EMPTY WEIGHT	561.557	307	172505		TWO SEATS TOTAL
IMPERIAL					
	WEIGHT Lbs	ARM Inches	MOMENT		TWO SEATS TOTAL
EMPTY WEIGHT	1238.0	12.09	14973		

THE ABOVE WEIGHTS INCLUDE:

EMPTY WEIGHT: DRAINABLE UNUSABLE FUEL & FULL ENGINE OIL

LOAD SYSTEM

1) REFER TO FLIGHT MANUAL & SUPPLEMENTS FOR LOAD LIMITATIONS.




3730-504-2006

WORK ORDER WB-3730	DATUM Wing Leading Edge
-----------------------	----------------------------

AMERICAN CHAMPION AIRCRAFT CORPORATION
ROCHESTER, WISCONSIN 53167

WEIGHT AND BALANCE WORKSHEET

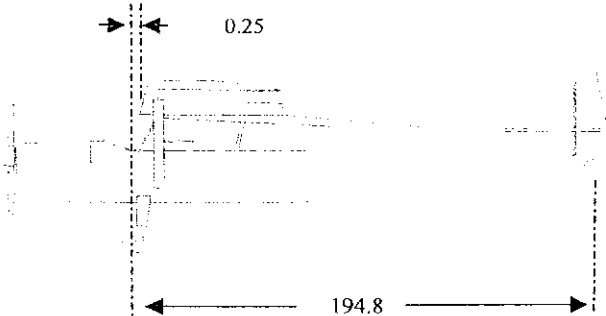

Weight Actual: 1232

Model Number 7GCAA

Serial Number: 504-2006

Identification Number: VH-ZCA

Date: 3/14/2006

Signed: _____

Aircraft Leveling Means: Drop plumb line from wing leading edge so that it is 10.18 inches forward of front face fuselage wing strut fitting.

1. Left Wheel Weight:	567 lbs.	Right Wheel Weight:	587 lbs.
2. Tail Wheel Weight	78 lbs.		
3. Total Aircraft Weight (Full Oil):	1232 lbs.		

C.G. = $\left(\frac{195 \text{ in.} \times 78 \text{ lbs.}}{1232 \text{ lbs.}} \right) - 0.25 \text{ in.} = 12.08 \text{ in. aft. L.E.}$

	WEIGHT (lbs.)	ARM (in.)	MOMENT (in. lbs.)
Aircraft Weight with Full Oil	1232	12.08	14882.56
Subtract Drainable Oil	-15	-36	+540
Add 1 Gallon Unuseable Fuel	+6	+15	+90
TOTALS	1223	XXXXXX	15512.56

Aircraft Empty C.G. 12.68 in. aft datum


Useful Load 527 lbs.

Datum: Wing Leading Edge


CENTER OF GRAVITY LIMITS:

NORMAL CATEGORY	(+ 14.2 in.) To (+ 18.2 in.)	At 1750 lbs.
	(+ 10.5 in.) To (+ 18.2 in.)	At 1325 lbs. or less
ACROBATIC CATEGORY	(+ 14.2 in.) To (+ 16.3 in.)	At 1750 lbs. or less.
	(+ 10.5 in.) To (+ 16.3 in.)	At 1325 lbs. or less

Straight line variation between points given.

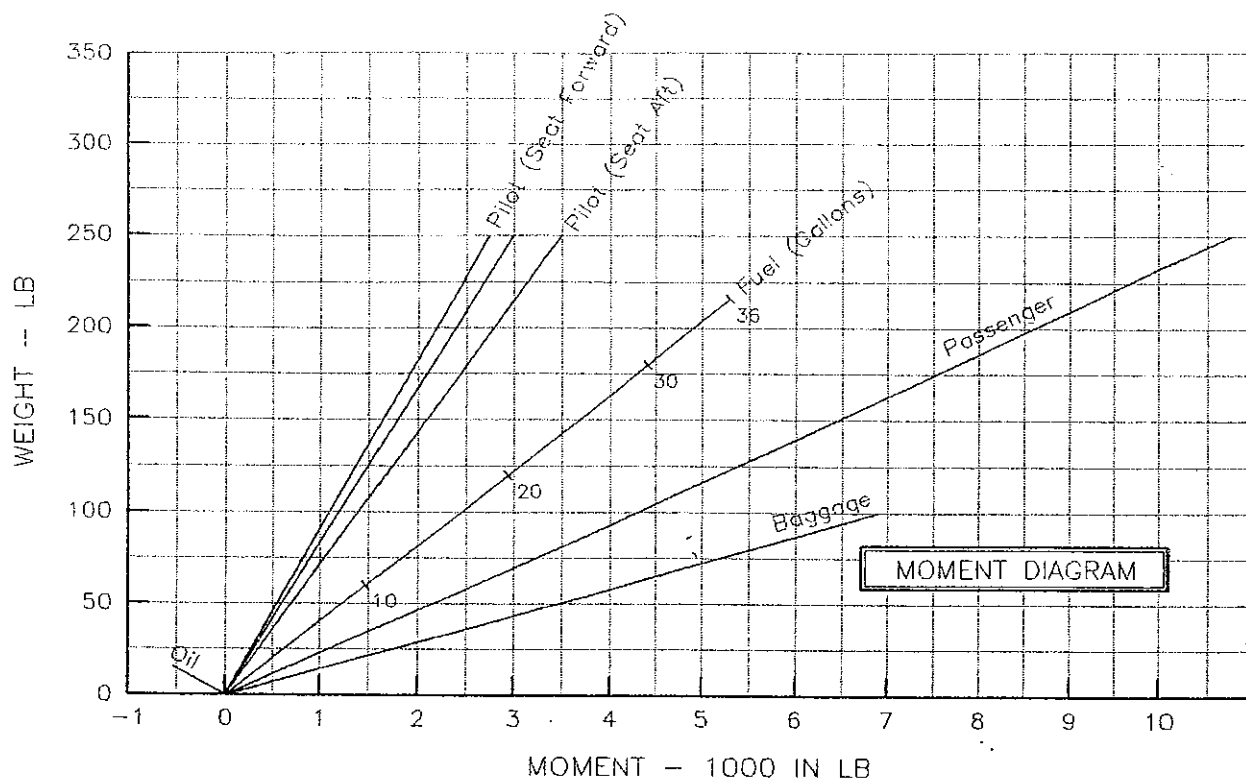

Add weights and moments of items in MOMENT DIAGRAM to airplane empty weight and moment. (negative oil moment) Locate intersection of total weight and moment on AIRPLANE LOADING ENVELOPE. Any point falling within the envelope meets all balance requirements.

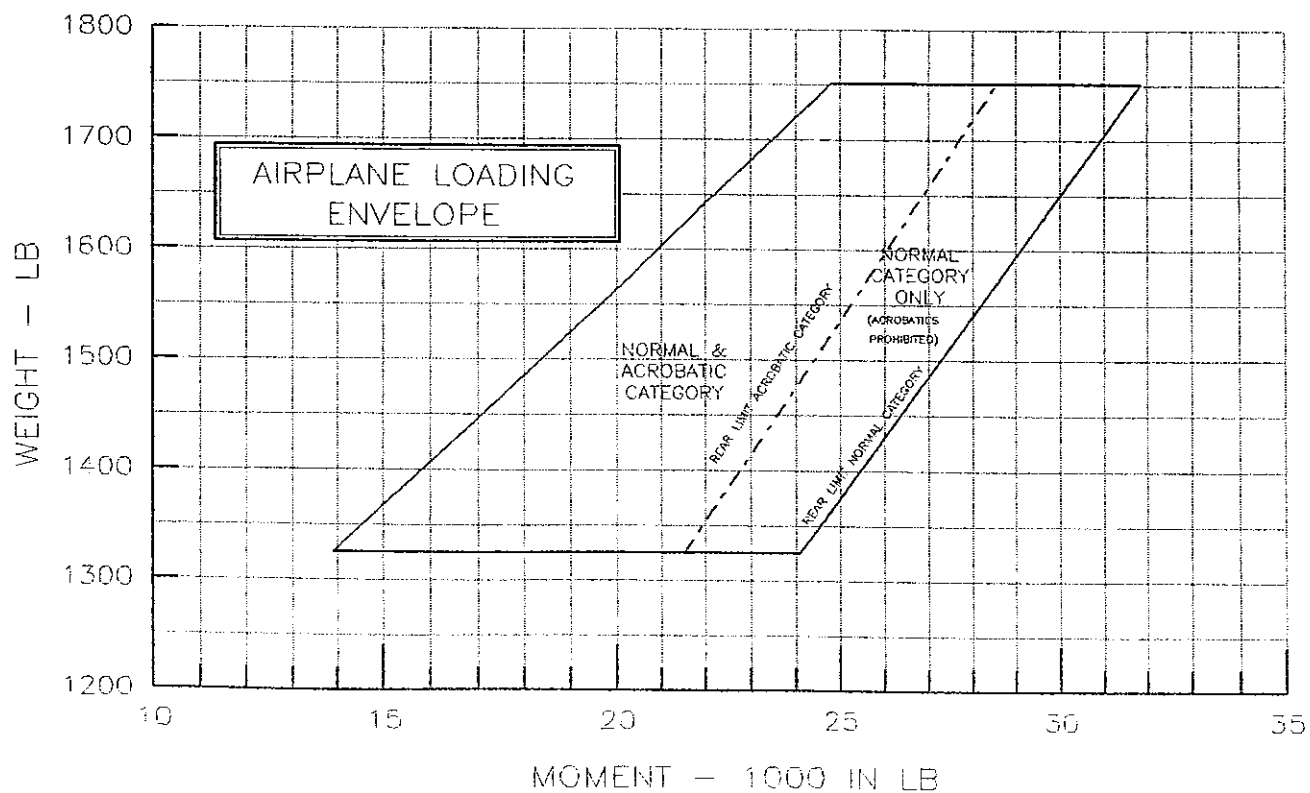

EQUIPMENT LIST

Suffix letters on item numbers:

R: Required for FAA certification

S: Standard equipment

A: Optional equipment not required

O: Optional equipment replacing standard or required item

ITEM #	X	DESCRIPTION	WT. LB.	ARM IN.
1R	X	Engine, Lycoming O-320-B2B	292.44	-41.22
2R	X	Propeller, Sensenich 74DM6S8-1-56	37.50	-58.58
3R	X	Spinner Installation	3.82	-60.61
4R	X	Oil Cooler	2.95	-29.16
5R	X	Filter-Carburetor Air	0.50	-45.00
6R	X	Tachometer-Recording	0.66	-5.00
7A		Manifold Pressure	0.50	-5.00
8R	X	Altimeter-Sensitive	0.50	-5.00
9R	X	Airspeed Indicator	0.50	-5.00
10A	X	Rate of Climb	0.50	-5.00
11A		Turn and Bank	2.00	-5.00
12A	X	Turn Coordinator	1.00	-5.00
13A		Artificial Horizon	2.19	-5.00
14A		Directional Gyro	2.63	-5.00
15A		Suction Gauge	0.22	-5.00
16A		Vacuum Pump	2.81	-28.31
17A		Accelerometer	0.50	-5.00
18R	X	Oil Temperature Gauge	0.57	-5.00
19R	X	Oil Pressure Gauge	0.35	-5.00
20R	X	Ammeter	0.26	-5.00
21A		Engine Hour Meter	0.80	-5.00

EQUIPMENT LIST

ITEM #	X	DESCRIPTION	WT. LB.	ARM IN.
22A		Clock, Davtron	0.22	-5.00
23A		Outside Temperature Gauge	0.17	6.00
24R	X	Compass, Airpath	0.77	-4.00
25A		Compass, Vertical Card	0.77	-4.00
26A		Cylinder Head Temperature Gauge	1.29	-5.00
27A		Carburetor Air Temperature Gauge	1.29	-5.00
28A		Exhaust Gas Temperature Gauge	0.50	-5.00
29A		Smartscan SR-8	2.00	-5.00
30A		EAC-1 CHT/OAT/EGT	1.00	-5.00
31R	X	Stall Warning	0.85	-1.74
32O	X	Starter-Skytech	9.00	-46.44
33R	X	Alternator-Electro Systems	10.63	-50.36
34R	X	Voltage Regulator	0.50	86.00
35R	X	Battery Installation – RG25 Concorde	27.50	86.00
36A	X	Cabin Light	0.57	24.00
37R	X	Tail Light	0.41	200.80
38R	X	Landing Light	0.47	-54.32
39A	X	Wing Tip Strobe	2.50	-2.00
40R	X	Position Lights--Wing	0.50	-2.00
41R	X	Brake Cylinder Cleveland 10-54 (toe)	1.00	-21.38
42R	X	Wheel & Brake, Cleveland 40-28 30-19a (both sides)	15.00	-0.93
43R	X	Tire & Tube 600x6, Type III 4 or 6 Ply (both sides)	18.50	0.25
44R	X	Tailwheel---Scott 3200	7.80	195.50
45A	X	Wheel Pants (Cleveland Wheels)	10.00	2.00
46R	X	Seat Installation Front--Adjustable	15.63	16.00
47R		Seat Installation Rear	13.63	47.00



PILOT'S OPERATING HANDBOOK

CITABRIA

MODELS 7ECA, 7GCAA, 7GCBC
1994 MODELS AND NEWER

(Revised 01-01-01)

AMERICAN CHAMPION AIRCRAFT CORPORATION
32032 WASHINGTON AVE – HWY D
PO BOX 37
ROCHESTER, WI 53167

* Model year is indicated by serial number suffix.

AMERICAN CHAMPION AIRCRAFT
CITABRIA (7 SERIES)

FOREWORD

FOREWORD

This manual has been prepared to inform the pilot of the features and systems incorporated in the American Champion Citabria Models. Recommended operating procedures and performance data are provided so that maximum utilization can be obtained with the utmost of safety, economy and serviceability.

It is strongly recommended that the pilot be familiar with the aircraft and this manual prior to flight.

This manual applies only to the aircraft as indicated on the cover page. Use of this manual with other aircraft is not recommended. However, the use of this manual with older Citabria models, systems, descriptions and specific operating limitations may vary slightly (eg. fuel quantity and inverted engine oil system). All placards and operating limitations in a specific aircraft MUST be adhered to.

This manual does not replace the FAA Approved Airplane Flight Manual. If an inconsistency exists between the manuals, the FAA Approved Airplane Flight Manual is to be the authority.

The words "WARNING", "CAUTION", and "NOTE" are used throughout the manual with the following definitions.

WARNING

An operating procedure, practice or condition, etc. which may result in injury or fatality, if not carefully observed or followed.

CAUTION

An operating procedure, practice or condition, etc. which if not strictly observed, may damage the aircraft or equipment.

NOTE

An operating procedure, practice or condition, etc. which is essential to emphasize.

TABLE OF CONTENTS

SECTION I	OPERATING LIMITATIONS.....	1-1
SECTION II	EMERGENCY PROCEDURES.....	2-1
SECTION III	NORMAL OPERATING PROCEDURES.....	3-1
SECTION IV	FLIGHT PERFORMANCE.....	4-1
SECTION V	WEIGHT AND BALANCE	5-1
SECTION VI	AIRCRAFT & SYSTEMS DESCRIPTION.....	6-1
SECTION VII	SERVICING	7-1

SECTION I

OPERATING LIMITATIONS

INDEX

GENERAL	1-1
FLIGHT OPERATION	1-1
POWERPLANT LIMITATIONS.....	1-2
AIRSPEED LIMITATIONS.....	1-3
WEIGHT AND BALANCE LIMITS.....	1-3
FLIGHT LOAD FACTORS.....	1-4
MANEUVERS	1-4
REQUIRED PLACARDS	1-4

GENERAL

This section lists all power plant and airframe operating limitations. These limitations are also indicated in the aircraft in the form of placards and instrument color markings. The aircraft placards and instrument markings are to be the authority if an inconsistency exists with this manual.

Limitations pertaining to optional equipment such as floats or external spray units must be obtained from the respective manufacturer.

WARNING

All operating limitations must be strictly adhered to
for reasons of safety and serviceability.

FLIGHT OPERATIONS

All Citabria models are approved in the Normal and Acrobatic Category.

Day or night flight in VFR conditions only is approved providing the aircraft is equipped with the required equipment as in operating condition as specified under Part 91 of the Federal Air Regulations (F.A.R.'s)

Flight into known icing conditions is prohibited.

POWER PLANT LIMITATIONS

Aircraft Model	7ECA	7GCAA, 7GCBC
Engine, Lycoming	O-235-K2C	O-320-B2B
Rated Horsepower (hp/rpm)	118	160-2700
Fuel Aviation Grade, Min. Octane Approved For Continuous Use	100/130* *(low lead)	100/130
Tachometer		
Normal Range (green arc) (rpm)	1800-2800	1800-2700
Maximum (red line) rpm	2800	2700
Cylinder Head Temperature		
Normal Range (green arc) (°F)	90-500	90-500
Maximum (red line) (°F)	500	500
Oil Temperature		
Normal Range (green arc) (°F)	100-245	100-245
Maximum (red line) (°F)	245	245
Oil Pressure		
Normal Range (green arc) (psi)	60-100	60-100
Caution Range (yellow arc) (psi)	25-60	25-60
Maximum (red line) (psi)	100	100
Minimum (red line) (psi)	25	25

AIRSPEED LIMITATIONS

AIRSPEED DESIGNATION

	CAS (MPH)
Never Exceed (V_{NE} – red line).....	162 <i>M P H</i>
Caution Range (yellow arc)	120-162
Maximum Structural Cruise (V_{NO})	120
Normal Operating Range (green arc).....	50-120
Flap Operating Range (V_{FE} – white arc).....	45-90 (7GCBC)
Maneuvering (V_A -- @ 1750 lbs.).....	120

NOTE

- CAS Calibrated airspeed is indicated airspeed (IAS) corrected for installation and instrument error.
- IAS Indicated airspeed assumes zero instrument error only.
- V_{NE} Maximum safe airspeed, not to be exceeded at any time.
- V_{NO} Not to be exceeded except in smooth air only and then with caution.
- V_{FE} Not to be exceeded with flaps extended.
- V_A No full or abrupt control movements allowed above this airspeed.

WEIGHT AND BALANCE LIMITS

Aircraft Model and Weight Center of Gravity Range

		Normal Category	Acrobatic Category
		14.2" – 19.2"	14.2" – 17.3"
7ECA	1750 lbs maximum	10.5" – 19.2"	10.5" – 17.3"
	1325 lbs or less		
7GCAA	1750 lbs maximum	10.5" – 18.2"	10.5" – 16.0"
	1325 lbs or less	10.5" – 18.2"	10.5" – 16.0"
7GCBC	1800 lbs maximum	14.2" – 19.2"	14.2" – 16.3"
	1325 lbs or less	10.5" – 19.2"	10.5" – 16.3"

NOTE

All measurements are aft of the datum line which is the wing leading edge. Center of gravity limits between weights are straight line variations between these points. See Section V for the flight envelope and loading instructions.

FLIGHT LOAD FACTORS (Normal and Acrobatic Category)

Positive Load	+5.0 G's Maximum
Negative Load	-2.0 G's Maximum

MANEUVERS

The following aerobatic maneuvers and entrance speeds are approved with no baggage and the aft center of gravity (C.G.)

Chandelle, Lazy Eights	120 MPH CAS
Barrel or Slow Roll	120 MPH CAS
Immelman	145 MPH CAS
Loop or Clover Leaf	140 MPH CAS
Split S	80 MPH CAS
Snap Roll	85 MPH CAS
Vertical Reverse	85 MPH CAS
Cuban Eight	145 MPH CAS

REQUIRED PLACARDS

In Full View of Pilot

Operations Limitations Card (Includes all limitations listed in this Section
in addition to weight and balance information)
Aerobatic Maneuvers Limitation Card

In Baggage Compartment

"Maximum Baggage – 100 lbs"

On Forward Left Side Window

"Do Not Open Above 130 MPH"
"Do Not Open Above 90 MPH" – (For Full Opening Side Window)

Above Fuel Shutoff Road

"Fuel 35 Gal. Useable – Down On"

On Emergency Door Release Handle

"Emergency Door Release – Pull Pin, Pull Handle"

PLACARDS (continued)

Top Half Cabin Door – Forward (Split-type door only)

“Do Not Exceed 90 MPH With Door Open”

Right Window Sill (When folding rear seat is installed)

“Seat Back Restrainer Cable Must Be Connected Before Flight
Unless Control Stick is Removed”

Adjacent to Strobe Light Switch

“Turn Off Strobe Lights When Taxiing in Vicinity of Other Aircraft
or During Flight Through Clouds, Fog or Haze.
Standard Position Lights to Be On For All Night Operations.”

On Radio Panel (If radio installed)

“Compass Calibrated With Radio On”

On Fuel Caps —

“Fuel 100LL Octane 18 Gals.”

On Instrument Panel

“Occupy Front Seat When Flying Solo”

On Battery Access Panel

“Service Battery Every 50 Hrs. of Normal Flight.
Service Every 10 Hrs. of Acrobatic Flight.”

SECTION II

EMERGENCY PROCEDURES

INDEX

GENERAL	2-1
FIRE	2-1
ENGINE FIRE DURING START	2-2
ENGINE FIRE IN FLIGHT	2-2
ELECTRICAL FIRE	2-2
ALTERNATOR ELECTRICAL FAILURE	2-3
ENGINE MALFUNCTION	2-3
ENGINE FAILURE ON TAKE-OFF	2-4
ENGINE AIR RESTART	2-4
PARTIAL POWER LOSS/ROUGH RUNNING	2-4
ABNORMAL OIL PRESSURE/TEMPERATURE INDICATIONS	2-5
LANDING EMERGENCIES	2-5
PRECAUTIONARY LANDING APPROACH	2-5
FORCED LANDING (COMPLETE POWER FAILURE)	2-6
DITCHING	2-6
UNUSUAL FLIGHT CONDITIONS	2-7
SEVERE TURBULENCE	2-7
STALLS	2-7
SPINS	2-7
INFLIGHT OVERSTRESS	2-8
EMERGENCY EXIT/BAIL OUT	2-8

GENERAL

This section covers the recommended procedures to follow during emergency and adverse flight conditions. As it is not possible to define every type of emergency that may occur, it is the pilot's responsibility to use sound judgment based on personal experience and knowledge of the aircraft to determine the best course of action.

It is considered mandatory that the pilot be familiar with this entire manual, in particular, the "Emergency Procedures" section to flight.

NOTE

All air speeds in this section are indicated airspeeds (IAS) unless stated otherwise.

FIRE

ENGINE FIRE DURING START

If the fire is believed to be confined to the intake or exhaust system (result of flooding engine):

1. Continue cranking engine with starter
2. Mixture Control – IDLE CUT OFF
3. Throttle – FULL OPEN
4. Inspect aircraft thoroughly for damage and cause prior to restart

If fire persists or is not limited to intake or exhaust system:

1. Mixture Control – IDLE CUT OFF
2. Fuel Shut-Off Valve on OFF
3. Electrical and Magneto Switches – ALL OFF
4. Exit Aircraft
5. Direct fire extinguisher through the bottom of the nose cowl or through the cowl inspection door

ENGINE FIRE IN FLIGHT

1. Mixture Control – IDLE CUT OFF
2. Fuel Shut-Off Valve on OFF
3. Electrical and Magneto Switches – ALL OFF
4. Cabin Heat – OFF front and rear
5. Use hand fire extinguisher if available
6. Land immediately using "Forced Landing Procedures"

WARNING

Do not attempt to restart engine.

ELECTRICAL FIRE

An electrical fire is usually indicated by an odor of hot or burning insulation.

1. Electrical Switches – ALL OFF (leave magneto switches ON)
2. Air Vents / Windows – OPEN if necessary for smoke removal and ventilation
3. Use hand fire extinguisher if available
4. If fire continues, land immediately

If fire/smoke stops and electrical power is required for the remainder of the flight, turn the master switch ON followed by the desired circuit switch. Allow sufficient time between turning on each switch in order that the faulty circuit may be located and switched OFF.

ALTERNATOR / ELECTRICAL FAILURE

An alternator failure is indicated by a steady discharge on the ammeter.

1. Master Switch – CYCLE in attempt to reset the overvoltage relay.
2. If excessive battery discharge continues, turn OFF all nonessential electrical equipment to conserve battery power.
3. Land as soon as practical as the battery will furnish electrical power for a limited time only.

If only one circuit (e.g. Radio) appears to be inoperative, remove and replace the suspected fuse with a spare of the same amperage rating. The spare fuses are located above the regular fuses in use.

NOTE

Engine operating is unaffected by a complete electrical system failure with the exception of the engine starter.

ENGINE MALFUNCTION

ENGINE FAILURE ON TAKE-OFF

In sufficient runway remains:

1. Throttle – CLOSED
2. Land using maximum braking after touchdown.

If airborne and insufficient runway remains for landing, attempt an engine restart if sufficient altitude permits:

1. Fuel Shut-Off Valve – CHECK ON
2. Mixture Control – FULL RICH
3. Carburetor / Alternate Air – FULL HOT
4. Magneto Switches – BOTH ON (Up)

If no restart is possible:

1. Select most favorable landing area ahead
2. Flaps – FULL DOWN (7GCBC)

WARNING

Maintain flying speed at all times and
do not attempt to turn back toward the runway unless
sufficient altitude has been achieved.

ENGINE AIR RESTART

1. Maintain Airspeed – 65 minimum recommended
2. Magneto Switches – BOTH ON (Up)
3. Mixture – FULL RICH or as required at high altitude
4. Fuel Shut-Off Valve – CHECK ON
5. Carburetor / Alternate Air – FULL HOT
6. Engine Primer – CHECK OFF
7. If restart is not possible, change throttle, mixture, primer, magneto, carburetor/alternate air heat settings, in attempt to restart.
8. Follow “Forced Landing Procedure” if unable to restart

NOTE

The engine start may be engaged in flight should the engine stop windmilling.

PARTIAL POWER LOSS / ROUGH RUNNING

1. Follow the engine air restart procedures
2. Land as soon as practical using "Precautionary Landing Approach" procedures

Carburetor icing is indicated if a gradual RPM loss is noticed. The carburetor / alternate air should be FULL HOT as long as suspected icing conditions exist.

ABNORMAL OIL PRESSURE / TEMPERATURE INDICATIONS

Oil pressure and temperature problems are usually related with one affecting the other. Before any drastic action is taken, cross check other engine instruments and control settings in an attempt to determine the source of the problem.

High oil temperature is generally a result of loss of oil, overheating (not CHT if available) or a malfunctioning oil cooler by-pass valve. If the situation remains unchecked, oil pressure usually drops resulting in possible engine damage. Power should be reduced while maintaining cruise airspeed; place mixture in FULL RICH position and land as soon as practical.

Little or no oil pressure is usually caused by a failed pressure relief valve, pump, loss of oil, clogged oil line, high oil temperature or a defective gauge. A landing should be made as soon as practical using minimum RPM changes. Plan a "Precautionary Landing Approach" as a complete engine failure is possible at any time.

LANDING EMERGENCIES

PRECAUTIONARY LANDING APPROACH

A precautionary landing approach should be used whenever power is still available but a complete power failure is considered imminent. Maintain a higher and closer pattern than normal in attempt to remain in gliding distance of the intended touchdown point. Use the normal landing procedures in addition:

1. Airspeed – 65 MPH recommended (60 MPH minimum)
2. Throttle – CLOSED when in gliding distance or runway
3. Flaps – LOWER AS NEEDED to increase approach descent angle (7GCBC)

NOTE

Slipping the aircraft by cross controlling the rudder and ailerons will increase the rate of descent both with or without flaps.
If a crosswind exists, place the lower wing into the wind.

FORCED LANDING (Complete Power Failure)

If the engine cannot be restarted in flight, trim the aircraft to the recommended glide speed. Remain within gliding distance of the intended point of landing. Maintain a higher and closer pattern than normal making allowance for wind.

Excessive altitude can be lost by extending flaps or slipping the aircraft. Diving the aircraft in an attempt to lose altitude when flying into a headwind will only increase the required landing distance.

1. Airspeed – Maintain 60-65 MPH
2. Mixture – IDLE CUT-OFF
3. Fuel Shut-Off Valve – OFF
4. Master Switch – ON
5. Flaps – UP to increase glide range (7GCBC)
6. Radio – MAYDAY 121.5 MHz
7. Attempt to position the aircraft approximately 1000 feet above ground level (AGL) over the intended point of landing or 500 feet when downwind and abeam the intended point of landing.
8. All Electrical Switches – OFF
9. On Final Approach
 - a) Airspeed – 65 MPH (60 MPH minimum)
 - b) Flaps – DOWN after intended point of landing assured (7GCBC)
10. Touchdown with minimum airspeed (three point full stall) if landing on rough terrain.

NOTE

If necessary, after aircraft has come to a complete stop,
remove and activate the emergency locator transmitter from the aircraft
for increased transmitting range.

DITCHING

Should it become necessary to make a forced landing over water, follow the “Forced Landing Procedures” in addition to the following:

1. Cabin Side Door – JETTISON
2. Land into wind if high winds are evident or parallel to swells with calm winds
3. Flaps – UP (Allows higher nose attitude at touchdown)
4. Contact the water with nose high attitude
5. DO NOT STALL prior to touchdown
6. After coming to a complete stop – EXIT AIRCRAFT

NOTE

Aircraft cannot be depended on to provide floatation after contacting the water.

UNUSUAL FLIGHT CONDITIONS

SEVERE TURBULENCE

To prevent overstressing the aircraft do not exceed 120 MPH in rough air. To minimize personal discomfort, decrease the IAS below 80 MPH. Maintain a level flight attitude rather than flying by reference to the altimeter and airspeed indicator as the pitot-static instruments may become very erratic.

STALLS

The Citabria stall characteristics are conventional. The stall warning horn, if installed, will proceed the actual stall by 5-10 MPH depending on the amount of power used. There is sufficient aerodynamic buffeting preceding the stall to provide the pilot with an adequate warning.

Aileron control response in a fully stalled condition is marginal. Large aileron deflections will aggravate a near stalled condition and their use is not recommended to maintain lateral control. The rudder is very effective and should be used for maintaining lateral control in a stalled condition with the ailerons placed in a neutral position.

To recover from a stall, proceed as follows:

1. Nose Attitude – LOWER with forward movement of control stick
2. Throttle – FULL OPEN simultaneously with control stick movement
3. Use rudder to maintain lateral control

SPINS

If a spin is inadvertently entered, immediate recovery should be initiated. The recovery procedure is as follows:

1. Throttle – CLOSED
2. Rudder – FULL DEFLECTION opposite direction of rotation
3. Elevator – SLIGHTLY FORWARD OF NEUTRAL
4. Ailerons – NEUTRAL POSITION

When rotation stops (1/2 – 1 turn after recovery initiated)

5. Rudder – NEUTRALIZE
6. Nose Attitude – RAISE smoothly to level flight attitude

WARNING

During the spin recover, the airspeed will build very rapidly with a nose low attitude. Do not use full or abrupt elevator control movements.

INFLIGHT OVERSTRESS

Should an overstress occur due to exceeding the airspeed or load factor limits, aerobatics should be terminated immediately. Fly at a reduced airspeed, (60-70 MPH) to a suitable landing point. DO NOT under any circumstances, make large control movements or subject the aircraft to additional G loadings above that required for straight and level flight. After landing, the aircraft should be inspected by a mechanic prior to the next flight.

EMERGENCY EXIT / BAIL OUT

1. Throttle – CLOSED
2. Door – JETTISON using Emergency Jettison Handle
3. Use the cabin door frame for support. Dive straight out and slightly aft of wing struts.
4. Parachute – OPEN immediately when clear of aircraft

NOTE

Emergency ground exit is also possible
through the left window.

SECTION III
NORMAL OPERATING PROCEDURES

INDEX

GENERAL.	3-1
PREFLIGHT INSPECTION.	3-2
BEFORE STARTING.	3-3
STARTING.	3-4
TAXI.	3-4
BEFORE TAKE-OFF.	3-5
TAKE-OFF (Normal).	3-5
TAKE-OFF (Obstacle).	3-6
TAKE-OFF (Soft Field).	3-6
CLIMB.	3-6
CRUISE.	3-7
AEROBATICS.	3-7
DESCENT.	3-8
LANDING (Normal).	3-8
LANDING (Obstacle).	3-9
SHUTDOWN.	3-9

GENERAL

This section covers all recommended normal operating procedures using a checklist format whenever possible with additional information if further explanation is required.

NOTE

All recommended airspeeds in this section are INDICATED AIRSPEEDS (IAS) with the aircraft loaded to the maximum gross weight.

PREFLIGHT INSPECTION

1) Cabin

- a) Cabin Door - CHECK condition, security
- b) Flight Controls - CHECK freedom of movement
- c) Magneto and Electrical Switches - OFF (check operation of lights if required and stall warning system with respective switches ON)
- d) Fuel Quantity Gauges - CHECK quantity
- e) Fuel Shut-Off Valve - ON
- f) Seat Belts - CHECK CONDITION - SECURE rear belt and harness if not in use
- g) Emergency Locator Transmitter - ARMED

2) Right Wing

- a) Wing Root Fairing - CHECK secure
- b) Flaps - CHECK condition, freedom of movement, security (7GCBC)
- c) Aileron - CHECK condition, freedom of movement, security
- d) Wing Tip and Light - CHECK condition
- e) Wing and Struts - CHECK condition, security
- f) Tie-Down - REMOVE
- g) Pitot-Static Tube - CHECK unobstructed (visual check only)
- h) Fuel - CHECK quantity, color, cap secure

3) Right Main Gear

- a) Chocks - REMOVE
- b) Tires - CHECK condition, inflation
- c) Brakes - CHECK condition, leakage

4) Nose Section

- a) Windshield - CHECK condition, cleanliness
- b) Oil - CHECK quantity, dip stick secure
- c) Fuel - DRAIN gascolator, CHECK leakage
- d) Engine Compartment - CHECK condition, leakage, etc.
- e) Cowling and Inspection Door - CHECK condition, security
- f) Propeller and Spinner - CHECK condition, security
- g) Air Filter - CHECK condition
- h) Landing Light - CHECK condition

5) Left Main Gear

- a) Same as right main gear

PREFLIGHT INSPECTION (Continued)

6) Left Wing

- a) Same as right wing, in addition
- b) Fuel Vent - CHECK unobstructed
- c) Stall Warning Vane - CHECK freedom of movement (if installed)

7) Fuselage (Left Side)

- a) Fabric - CHECK condition, oil, battery acid leakage, etc.
- b) Windows - CHECK condition, cleanliness
- c) Fuel Belly Drain - DRAIN, CHECK leakage
- d) Radio Antenna(s) - CHECK secure

8) Empennage

- a) Horizontal Stabilizer and Brace Wires - CHECK condition, security
- b) Vertical Stabilizer and Tail Light - CHECK condition
- c) Elevator, Trim Tab and Rudder - CHECK condition, freedom of movement, security
- d) Tail Wheel - CHECK condition, inflation, security
- e) Tie-Down - REMOVE

9) Fuselage (Right Side)

- a) Same as fuselage left side (no fuel drain on right side)

BEFORE STARTING

- 1) Seat Belts/Shoulder Harness - FASTENED
- 2) Fuel Shut-Off Valve - ON
- 3) Brakes - SET
- 4) Electrical Switches - OFF
- 5) Cabin Door - CLOSED (windows as desired)

STARTING THE ENGINE

A. Engine cool

1. Mixture full rich.
2. Gas on.
3. Prime about two strokes or as necessary.
4. Master switch on.
5. Ignition switches on.
6. Throttle open slightly - 1/4 to 1/2 in.
7. Brakes on.
8. Engage starter (do not operate starter continuously for more than 15 seconds).
9. If no oil pressure 30 seconds after start, stop engine and determine cause.

B. Engine hot

For a hot engine, the procedure above should be followed except that priming is normally unnecessary. A hot engine can be easily flooded. If this occurs, open the throttle completely and turn the engine over until it fires. As engine starts, retard throttle to normal idle position.

To clear an engine that has been flooded due to excessive priming, proceed as follows:

1. Mixture - IDLE CUT-OFF
2. Throttle - FULL OPEN
3. Magneto Switches - OFF
4. Starter - ENGAGE for several propeller revolutions
5. Repeat normal starting procedure using no prime

CAUTION

Limit the use of the starter to 30 seconds duration maximum with a two minute cooling off period between each starter engagement.

During cold weather operation, (below 20° F) it is recommended that the engine be pre-heated by directing warm air through the opening in the bottom or front of the engine cowl. This practice will prolong the service life of the engine and starter.

During the ground operation, the mixture should be FULL RICH and the carburetor air COLD to insure good engine cooling and filtered air. Prolonged idle below 1000 RPM is not recommended due to plug fouling and insufficient cooling air when the aircraft is not in motion.

TAXI

Taxi operations during high winds requires the conventional use of the flight controls. With a head wind or quartering head wind, place the control stick full aft and into the wind. With a tail wind or quartering tail wind, use the opposite procedures. The use of the wheel brakes in conjunction with the rudder will assist the pilot in maintaining directional control.

BEFORE TAKE-OFF

- 1) Brakes - SET
- 2) Flight Controls - CHECK freedom of movement, proper operation
- 3) Elevator Trim - SET take-off position
- 4) Flight Instruments/Radio(s) - CHECK and SET
- 5) Flaps - SET as desired (7GCBC only)
- 6) Fuel Shut-Off Valve - ON
- 7) Mixture - FULL RICH (lean as required for high altitude)
- 8) Engine Instruments - CHECK normal indications
- 9) Engine Run-Up - 1800 RPM (Elevator Control - FULL BACK)
 - a) Magnetos - CHECK (200 RPM maximum drop, 50 RPM maximum differential)
 - b) Carburetor/Alternate Air - CHECK operation then return to COLD position
 - c) Engine Instruments - CHECK normal indications
 - d) Throttle - 1000 RPM
- 10) Cabin Door and Windows - CLOSED and LATCHED
- 11) Seat Belts/Shoulder Harness - FASTENED

High power operation (above 2200 RPM) and engine run-up should be made into the wind and kept to a minimum especially during high temperature conditions. The stick should also be held full aft to prevent the possibility of the aircraft nosing over.

TAKE-OFF (Normal)

- 1) Flaps - UP (7GCBC)
- 2) Throttle - FULL OPEN applying smoothly
- 3) Engine Instruments - CHECK normal indications
- 4) Attitude - RAISE TAIL to level flight attitude
- 5) Lift-Off - 55-60 MPH
- 6) Climb - 75-80 MPH

Take-off characteristics are conventional. It is recommended to raise the tail with the elevator as soon as possible for better forward visibility and directional control.

CAUTION

In the level flight attitude, the wheel brakes are very sensitive. It is recommended that the directional control be maintained with the use of the rudder only.

TAKE-OFF (Normal) (Continued)

During crosswind conditions, place the control stick into the wind (up wind aileron UP) and assume a tail high attitude with the elevator to prevent drifting or premature lift-off.

High altitude take-offs are accomplished by using the normal take-off procedures with the addition of leaning the mixture control for smooth engine operation.

TAKE-OFF (Obstacle)

During an obstacle take-off, use the normal take-off procedures with the following exceptions:

- 1) Flaps - SET 14° (2nd notch, 7GCBC only)
- 2) Lift-Off - 50-55 MPH
- 3) Climb - 58 MPH (best angle of climb) until clear of obstacle

TAKE-OFF (Soft Field)

For soft field take-off, use the normal take-off procedures with the following exceptions:

- 1) Flaps - SET 14° (2nd notch 7GCBC only)
- 2) Attitude - TAIL LOW but clear of ground
- 3) Lift-Off - ASSIST using elevator
- 4) After Lift-Off - LEVEL FLIGHT to obtain safe margin of airspeed prior to climb
- 5) Flaps - UP (7GCBC only)

WARNING

The aircraft will lift-off at very low IAS but continued climb-out below 58 MPH immediately after take-off is not recommended.

CLIMB

- 1) Throttle - FULL OPEN
- 2) Mixture - FULL RICH below 5000 feet.
- 3) Airspeed - 75-80 MPH

For maximum performance climbs, use full throttle and the following conditions:

BEST RATE OF CLIMB

- 1) Flaps - UP
- 2) Airspeed - 69 MPH

BEST ANGLE OF CLIMB

- 1) Flaps - 14° (2nd notch 7GCBC only)
- 2) Airspeed - 58 MPH

CRUISE

- 1) Level-Off - TRIM
- 2) Airspeed - ACCELERATE to desired cruise airspeed
- 3) Throttle - SET RPM to cruise power
- 4) Mixture - LEAN when below 75% power

The fuel mixture should be leaned at any altitude when below 75% of maximum power. Lean to peak EGT if equipped. If no EGT is installed, lean until engine roughness is noted then enrich until smooth.

WARNING

Range and endurance information is based on a properly leaned fuel mixture. Failure to lean the fuel mixture will increase fuel consumption appreciably.

AEROBATICS

The Citabria is certified in the Acrobatic Category. However, this desirable capability also places a much greater demand on the pilot's ability, knowledge of the aircraft and current regulations. The following information is provided to make aerobatic flying enjoyable, with the utmost emphasis on safety.

Federal Aviation Regulations (FARs) Part 91.71 specify the airspace and altitudes required for aerobatic flight. The minimum altitude of 1500 FT AGL is the pilot's greatest safety factor and should not be compromised. The wearing of approved parachutes is specified in Part 91. It is strongly recommended that parachutes always be worn during aerobatic flight.

The Citabria structure is designed to withstand a maximum load factor of +5 G's and -2 G's at maximum gross weight of 1650 lbs. and below. A change in the gross weight also changes the effective load factor limit. To fly at reduced weights increases the safety factor and improves performance. To fly above gross weight is not only prohibitive, but also greatly increases the chances of a serious overstress resulting in damage or possible structural failure.

The Citabria exhibits excellent control response and stability. However, to maintain this for aerobatic flight, the rear center of gravity (C.G.) limit is critical. The rear C.G. is therefore reduced when flying in the Acrobatic Category. This limit is specified in Section I. The flight envelope in Section V also reflects this change. For this reason, baggage is NOT allowed during aerobatic flight.

AEROBATICS (Continued)

A person learning to fly must be taught how to do so safely. The same holds true for a pilot learning aerobatics. To attempt an aerobatic maneuver with no prior instruction is extremely dangerous and NOT recommended.

Aerobatic flight places a greater demand on both the pilot and the aircraft. A thorough pre-flight inspection/evaluation for both is considered essential. The pilot must know and abide by the limitations of the aircraft and his own personal limitations as well. At the completion of the flight, a post-flight inspection of the aircraft should also be conducted. If any discrepancies or doubts exist that concern the airworthiness, consult a mechanic prior to the next flight.

DESCENT

- 1) Mixture - FULL RICH
- 2) Throttle - REDUCE as desired
- 3) Airspeed - AS DESIRED

The descent should be made with enough power to maintain cylinder head and oil temperatures in green arc. If possible, avoid windmilling the engine with the propeller by reducing airspeed or increasing power.

LANDING (Normal)

- 1) Seat and Shoulder Harness - FASTENED
- 2) Mixture - RICH
- 3) Brakes - CHECK FIRM (Park Brake - OFF)
- 4) Flaps - AS DESIRED (7GCBC)
- 5) Approach Airspeed - 60-70 MPH
- 6) Throttle - AS DESIRED to control rate of descent
- 7) After Touchdown - FLAPS UP (7GCBC) - Brake as required

Aircraft landing characteristics are conventional. Either wheel landings or full stalls (3 point) are permissible. During gusty wind conditions, increase airspeed approximately 5 MPH above normal followed by a wheel landing.

Full stall (3 point) landings are recommended for soft or rough fields.

Crosswind approaches can best be accomplished by using the wing down top rudder method followed by a wheel landing. Keep the lower wing into the wind after touchdown. Do not drop the tail until airspeed is well below flying speed.

CAUTION

The use of wheel brakes is not recommended until after the tail wheel is in contact with the ground. For maximum braking, the control stick should be FULL AFT.

LANDING (Obstacle)

Use of normal landing procedures in addition:

- 1) Flaps - FULL DOWN (7GCBC)
- 2) Approach Airspeed - 60 MPH
- 3) Throttle - AS DESIRED to control rate of descent
- 4) Slip aircraft as necessary to increase rate of descent

WARNING

A relatively high rate of descent is possible in this configuration when at full gross weight and the throttle closed. If airspeed is allowed to decrease below 60 MPH, level off can only be assured with an application of power.

SHUTDOWN

- 1) Brakes - SET
- 2) Electrical Equipment - OFF
- 3) Mixture - IDLE CUT-OFF
- 4) Magnetos/Master Switch - OFF after propeller stops
- 5) Controls - SECURE with lap belt around forward control stick only
- 6) Wheels - CHOCKED
- 7) Wing/Tail Tie Downs - SECURE

NOTE

If high winds are anticipated, the aircraft should be hangared. If the aircraft must be left out, park into the wind and use additional tie-down ropes for security. Place the flaps in the FULL DOWN position (7GCBC) and secure the forward control stick with the lap belt.

SECTION IV

FLIGHT PERFORMANCE

INDEX

GENERAL	4-1
AIRSPED CORRECTION	4-2
STALL SPEEDS.	4-4
TAKE-OFF PERFORMANCE.	4-3
MAXIMUM RATE OF CLIMB	4-3
CRUISE PERFORMANCE.	4-4
LANDING PERFORMANCE	4-4

GENERAL

This data is to inform the pilot what he can expect from the aircraft in the way of performance and to assist in preflight planning.

Flight performance data is included for all Citabria models. The data has been compiled from both estimated calculations and actual flight test using average piloting techniques, with an aircraft and engine in good operating conditions. All information is corrected for standard atmospheric conditions.

Performance may vary from the given data due to the many possible variables present with a specific aircraft and flight condition. The pilot is therefore encouraged to maintain a personal flight log for his aircraft. This will not only provide more accurate preflight planning information for future flights, but also can be used as an indicator in determining the general condition of a particular aircraft.

INDICATED AIR SPEED vs. CALIBRATE AIRSPEED

I.A.S., mph	T.I.A.S., mph
50	54
60	62
70	70
80	79
90	88
100	97
110	106
120	116
130	124
140	133
150	142
160	150
170	159

TAKE-OFF DISTANCE AND RATE OF CLIMB VS. ALTITUDE AND TEMPERATURE
AMERICAN CHAMPION MODELS 7ECA, 7GCBC, 7GCAA

MODEL		7ECA			7GCBC			7GCAA		
CYCLE		118 HP.			160 HP.			160 HP.		
PROP		72CKS8-0-52			74DM6S8-1-56			74DM6S8-1-56		
PRESSURE ALTITUDE FT.	TEMP °F	T.O. DIST. FT.	50 FT. OBST. FT.	R/C FT/MIN	T.O. DIST. FT.	50 FT. OBST. FT.	R/C FT/MIN	T.O. DIST. FT.	50 FT. OBST. FT.	R/C FT/MIN
0	0	340	716	800	231	457	1240	289	535	1210
	20	372	763	775	254	491	1210	317	574	1180
	40	415	832	750	279	530	1170	350	618	1150
	60	455	895	725	305	567	1145	382	663	1120
	80	496	961	700	340	616	1110	417	713	1090
	100	544	1034	675	363	649	1090	453	763	1060
0	0	407	860	695	272	536	1100	343	622	1080
	20	444	929	660	294	573	1070	376	671	1050
	40	492	1004	635	331	629	1030	414	727	1020
	60	543	1086	610	374	684	1010	452	784	990
	80	597	1174	585	397	733	980	497	846	960
	100	655	1269	560	433	777	950	538	904	930
0	0	482	1043	575	324	635	980	401	738	950
	20	538	1147	545	360	695	930	448	806	920
	40	589	1239	520	393	746	900	479	857	890
	60	640	1329	495	458	834	870	527	925	860
	80	690	1432	470	474	870	840	573	991	830
	100	788	1580	450	522	935	820	643	1086	800
0	0	576	1301	465	385	763	840	479	886	820
	20	640	1432	435	421	827	800	529	962	790
	40	707	1562	410	472	905	770	582	1040	760
	60	789	1716	385	522	981	740	647	1133	730
	80	858	1858	365	568	1043	720	706	1226	700
	100	968	2058	340	626	1137	690	760	1304	680
0	0			350			700			690
	20			325			670			660
	40			300			640			630
	60			275			610			600
	80			245			530			570
	100			225			550			540

ALL FIGURES ARE MAXIMUM PERFORMANCE AT GROSS WEIGHT. TAKE-OFF IN 7GCBC MADE WITH 2 NOTCHES OF FLAP UNTIL AIRBOURNE. TAKE-OFF DISTANCE ON DRY PAVEMENT.

AIRCRAFT SPECIFICATIONS - ALL MODELS

MODEL	7ECA	7GCAA	7GCBC
STALL SPEED, (MPH)	51	51	51
STALL SPEED FLAPS, (MPH)			47
CRUISE SPEED, (MPH)	117	130	128
CRUISE SPEED 75% HP (MPH- GAL)	112-7500	125-3000	125-3000
RANGE 75% HP. (GALS.-MILES- GAL)	36-672-6	36-500-4	36-500-4
FUEL CONSUMPTION 75% HP (GAL)	6	9	9
RATE OF CLIMB, (FT.-FPM)	69	69	78
SERVICE CEILING (FT.)	12,000	17,000	17,000
TAKE-OFF RUN (FT.)	450	375	296
TAKE-OFF OVER 50 FT. ACCELERATION (FT.)	890	630	525
LANDING ROLL (FT.)	400	400	310
LANDING DIST. OVER 50 FT. ST. (FT.)	775	755	690

NOTE: PERFORMANCE IF FOR GROSS WEIGHT AT SEA LEVEL UNLESS NOTED.
* AVERAGE WITH STANDARD EQUIPMENT.

SECTION V

WEIGHT AND BALANCE

INDEX

GENERAL	5-1
LOADING PROCEDURES.	5-2
SAMPLE LOADING PROBLEM.	5-3
FLIGHT ENVELOPES.	5-4,5,6

GENERAL

It is the pilot's responsibility to insure that the aircraft is loaded properly and within the weight and balance limitations. All flight performance, procedures and characteristics are based on this prerequisite.

If the aircraft is to be used for aerobatic flight, it must be loaded within the approved flight envelope. The rear center of gravity limit is considered critical. In addition, no baggage is allowed.

Although the gross weight limit is not affected by aerobatic flight, the importance of this limit cannot be overemphasized. Subjecting the aircraft to the maximum approved load factor limits in an overgross condition may result in damage or complete structural failure of the airframe.

The actual licensed empty weight and center of gravity (C.G.) of a specific aircraft can be found on the Weight and Balance Form and the Operating Limitations Card, both of which are a permanent part of the aircraft's file. All additional changes to the aircraft's empty weight and C.G. after the time of manufacture must also be attached to or indicated on both forms. From this information and the following instructions, the pilot can easily determine the "Useful Load" and proper loading distribution for the aircraft.

NOTE

The rear center of gravity limits vary with each model Citabria. A flight envelope is provided for each model.

LOADING PROCEDURES

1. Determine from the Weight and Balance Sheet, in the aircraft file, the "Licensed Empty Weight and Moment" (in-lbs). Enter these figures under "Your Airplane" of the Sample Loading Problem, Figure 5-1.
2. Full oil capacity can be assumed for all flights. For ease of future loading computations, the new "Empty Weight and Moment with Oil" should be determined and entered in the Sample Loading Problem under "Your Airplane".
3. Using the Loading Graph, Figure 5-2, determine the weight and the moment of the following items and enter these figures on the Sample Loading Problem.
 - a) Pilot
 - b) Rear Passenger
 - c) Wing Fuel - 35 Gals. Maximum Usable @ 6 Lbs./Gal.
 - d) Baggage - 100 Lbs. Maximum (Normal Category Only)
4. Add the "Aircraft Empty Weight and Moment with Oil" and all the items in Step 3 to determine the "Gross Take-Off Weight and Moment".
5. Using the Flight Envelope, Figures 5-3, 5-4, 5-5 for the model Citabria used, determine that the gross take-off weight and moment are within limits.

WARNING


If the aircraft is not within the approved flight envelope limits, it must be reloaded. Under no circumstances should the aircraft be flown with an out of limits condition, particularly if aerobatic flight is contemplated.

SAMPLE LOADING PROBLEM


ITEM	ARM (in)	SAMPLE AIRPLANE		YOUR AIRPLANE	
		WEIGHT (lbs)	MOMENT (in-lbs)	WEIGHT (lbs)	MOMENT (in-lbs)
1. Licensed Empty Weight	12.2	1153	14067		
Oil - 8 qts @ 7.5 lbs/gals *7ECA - 6 qts	-36.0	+15 (+11*)	-540 (-396*)	+15 (+11*)	-540 (-396*)
2. Liscensed empty Weight & Moment With Oil		1168	13527		
3. Pilot	11.5	190	2185		
Rear Passenger	42.0	190	7980		
Wing Fuel - 35 Gals Max @ 6 lbs/gal	24.5	102	2499		
Baggage - 100 lbs Max (Normal Category Only)	69.0	-0-	-0-		
4. Gross Take-Off Weight & Moment		1750	26191		

- NOTE: 1. *7ECA only - 6 qts oil.
 2. To determine Take-Off Center of Gravity (inches aft of datum), divide the Gross Take-Off Moment by the Gross Take-Off Weight. Center of Gravity Limits are Listed in Section I.
 3. the above sample problem is loaded for aerobatic flight conditions and assumes a 170 pound pilot and passenger with parachutes.

FIGURE 5-1 SAMPLE LOADING PROBLEM

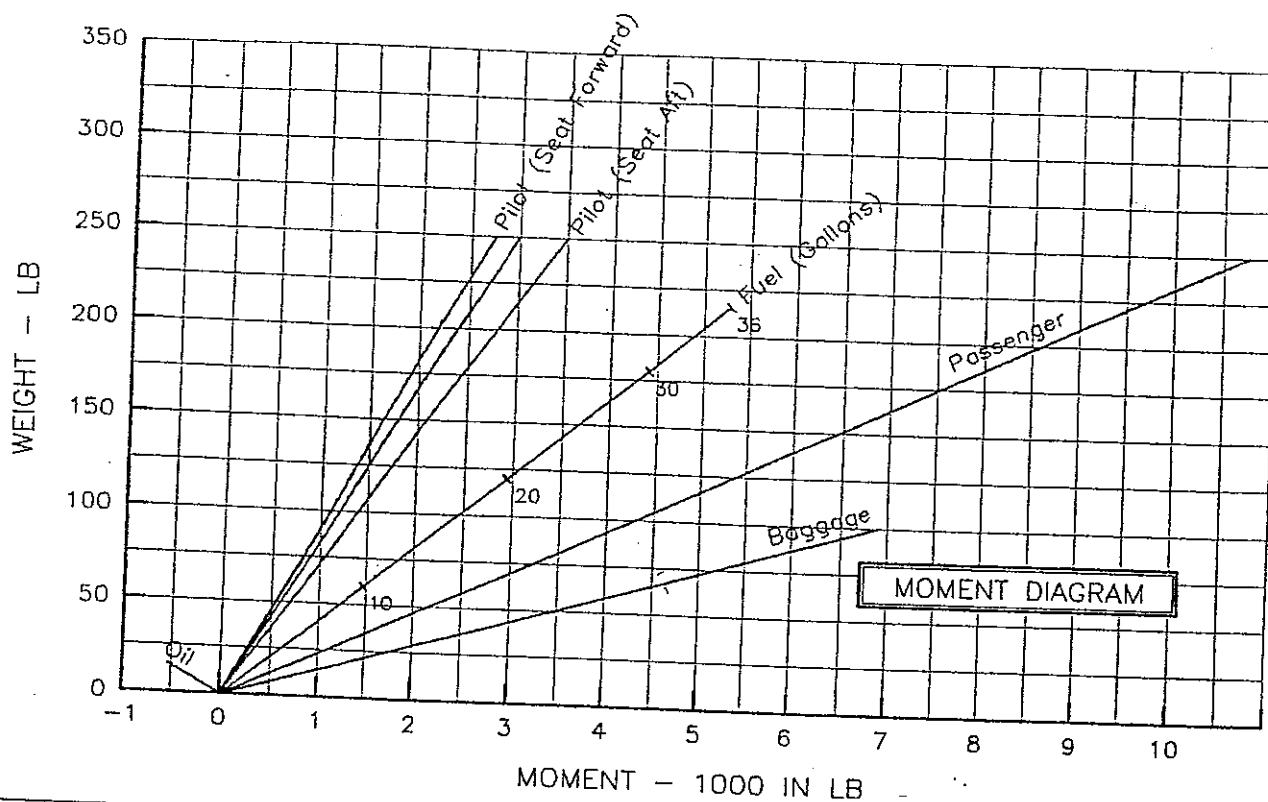

Add weights and moments of items in MOMENT DIAGRAM to airplane empty weight and moment. (negative oil moment) Locate intersection of total weight and moment on AIRPLANE LOADING ENVELOPE. Any point falling within the envelope meets all balance requirements.

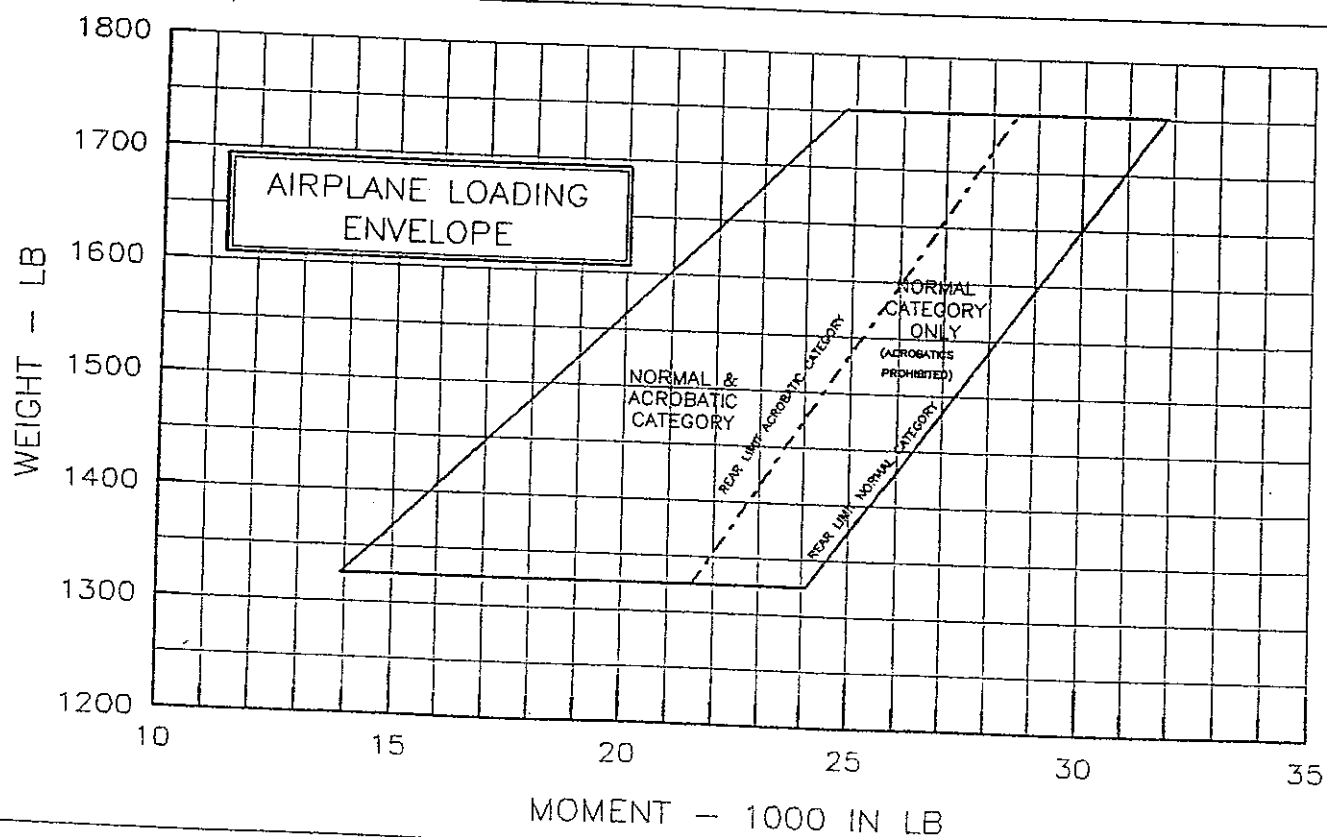

SECTION VI
AIRCRAFT AND SYSTEMS DESCRIPTION

INDEX

GENERAL.	6-1
AIRCRAFT FILE.	6-4
AIRFRAME STRUCTURE.	6-4
ENGINE.	6-5
FLIGHT CONTROLS.	6-6
FLAPS (7GCBC ONLY).	6-6
LANDING GEAR AND BRAKES.	6-7
ELECTRICAL SYSTEM.	6-7
FUEL SYSTEM.	6-9
HEATING AND VENTILATION.	6-12
AIRCRAFT LIGHTING.	6-12
FLIGHT INSTRUMENTS.	6-12
AVIONICS.	6-13
CABIN FEATURES.	6-14
UTILITY OPTIONS.	6-14
CORROSION PROOFING.	6-15
SEAPLANE KIT.	6-15
GLIDER/BANNER TOW.	6-15

GENERAL

This section describes the aircraft, systems and equipment. Because of the many optional items available, this section may not be typical for all aircraft. However, the more popular options available from the factory will be described. Consult the Aircraft Equipment list to determine what equipment is installed on a specific aircraft.

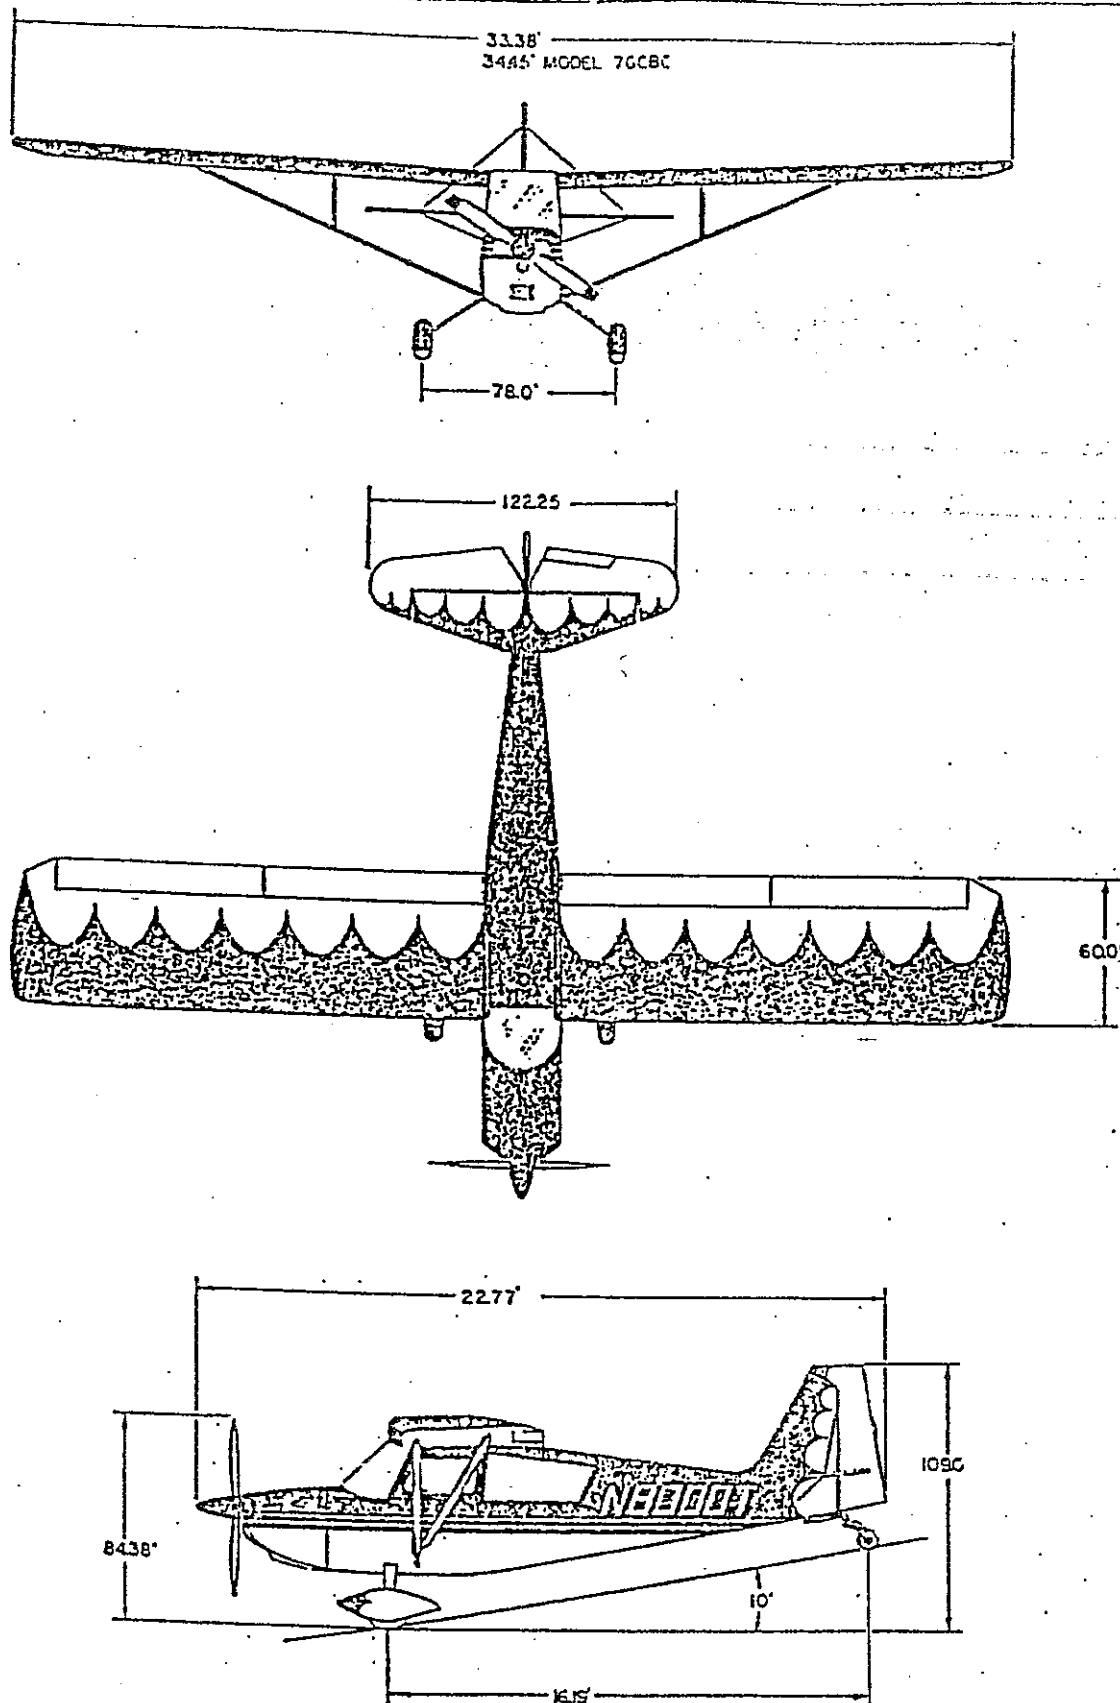


FIGURE 6-2 CITABRIA THREE-VIEW

AIRCRAFT FILE

The aircraft file includes the required paperwork that must be in the aircraft or available upon request. These items will reference the aircraft by serial number, model number and registration number. The aircraft identification plate, which also contains this information, is located on the cabin floor to the left and forward of the rear seat. The file consists of the following items:

These items must be displayed inside the aircraft.

- 1) Airworthiness Certificate
- 2) Aircraft Registration
- 3) Aircraft Radio License (if radio installed)
- 4) Operating Limitations Placards and Markings

These items must be in the aircraft but need not be displayed.

- 1) Aircraft Equipment List
- 2) Weight and Balance Sheet

These items need not be carried in the aircraft but must be available upon request.

- 1) Engine Log Book
- 2) Aircraft Log Book

NOTE

The Pilot's Operating Manual should always be carried in the aircraft readily available to the pilot during flight but is not legally required.

AIRFRAME STRUCTURE

The Citabria is a two place, tandem seating, high wing aircraft with conventional landing gear. See Figures 6-1 and 6-2 respectively for the principal dimensions and specifications and an external three-view of the aircraft. All components are designed to meet or exceed the requirements set forth by the Federal Aviation Administration.

The fuselage and empennage are constructed of welded tubular steel providing high strength and pilot protection under all conditions. The entire assembly is protected by an epoxy primer and covered with a heavy fire resistant dacron fabric. The life-time dacron is finished with several coats of pigmented dope which is durable, long lasting and easy to care for. The streamlined fiberglass engine cowl is a two piece, split type for easy removal providing complete access to the engine for servicing.

The wing structure includes two aluminum spars, each supported by struts, providing a high strength to weight ratio. The wing ribs and the leading edge are aluminum and covered with dacron. The finish is identical to the fuselage.

ENGINE

The Citabria is powered by a carbureted Lycoming four cylinder, horizontally opposed, direct drive engine. The all metal, fixed pitch propeller is designed to give good take-off and cruise performance.

The wet sump oil system is conventional with the pressure and temperature automatically controlled by an internal engine driven gear pump and external oil cooler (TECA has no cooler).

Oil temperature and pressure gauges are the direct reading type requiring no electric power. Oil quantity is determined by a dip stick with access through the inspection door on the right side of the engine cowl.

Ignition is provided by two engine magnetos which are independent of the aircraft electrical system and each other. Separate magneto switches are located on the electrical panel mounted on the upper left side of the cabin between the two seats.

Starting is accomplished by an electric geared cranking motor using the aircraft battery. The starter button is located in the lower center of the instrument panel.

Dual throttle controls are located on the left side of the cabin for both the front and rear seats.

The red (push-pull) mixture control is located on the left side of the instrument panel and is used for fuel leaning and engine shutdown. Idle cut-off is accomplished by pulling the control full out.

The air induction system is equipped with a large heavy duty air filter mounted in front of the engine cowl. Carburetor heat is available from the exhaust manifold if carburetor icing exists. The carburetor heat control is located below the throttles. Maximum heat is applied with the control in the aft position. The aft position also by-passes the air filter should it become obstructed with ice or dirt.

NOTE

With the carburetor heat in the HOT position, the induction air to the engine is unfiltered. To prevent damage to the engine, it should not be used during ground operations except for an operational check of system prior to flight.

Engine RPM is indicated by a mechanical tachometer using a flexible drive cable. An hour meter based on cruise RPM, is incorporated in the tachometer. The electrical hour meter (Hobbs meter) indicates the actual running time of the engine and is activated by engine oil pressure.

Citabria

LANDING GEAR AND BRAKES

The heavy duty spring steel conventional landing gear allows routine operations on rough landing strips. The steerable Scott tail wheel allows excellent directional control during taxi operations with the use of wheel springs which are attached to the rudder control surface. The tail wheel also provides free swiveling of 360° allowing the aircraft to be turned within its own wing span.

Hydraulic disc brakes are mounted to each main wheel. The brakes can be operated separately from either seat by applying heel pressure on the brake pedals or toe pressure on the top of the rudder pedals if toe brakes are installed.

The brake hydraulic reservoir is mounted to the aft side of the firewall for easy access. A clear plastic line between the reservoir and the master cylinders is visible from the pilot's seat indicating a low fluid condition.

The park brake control is located to the right and under the instrument panel. To set the brakes, pull the park brake control out and apply brake pressure. To release the brakes, push the park brake control in.

ELECTRICAL SYSTEM

The electrical system is 12 volts, direct current, using the airframe as a negative ground. See Figure 6-4. All electrical circuits are protected by replaceable fuses.

A 60 ampere, self-exciting, engine driven alternator provides electrical power during normal operations and is capable of operating all electrical components simultaneously. The voltage regulator maintains a system voltage of $14 \pm .5$ volts.

The 7KCAB only has a gravity sensitive mercury switch which disconnects the alternator from the battery during inverted or negative G flight maneuvers. This prevents pressure buildup in the battery which could result in damage to the battery or acid spillage.

A lead-acid battery supplies power for starting and stand-by use for a limited time only should the alternator fail in flight.

An ammeter on the instrument panel indicates a charge or discharge condition of the battery. With the alternator functioning normally, a slight charge condition should exist depending on the condition of the battery. A discharge indicates that an alternator malfunction exists and the battery is carrying the electrical load.

NOTE

A discharge is normal at low idle RPM during operation of high current items such as the landing light.

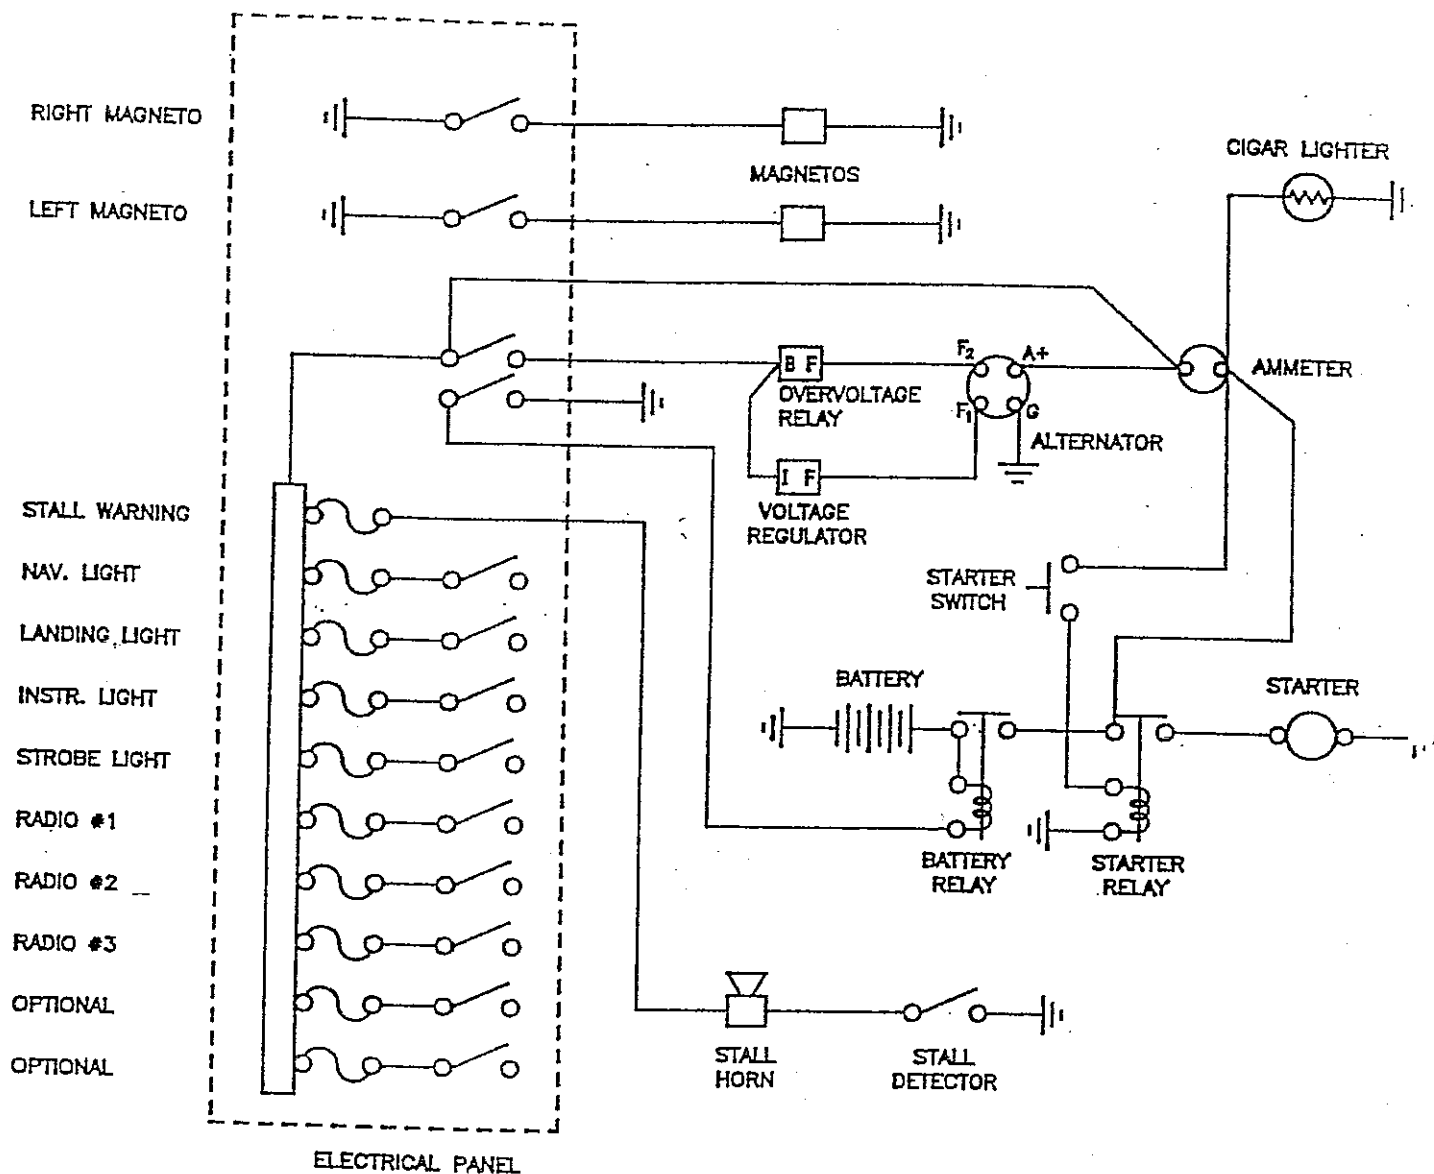


FIGURE 6-4 ELECTRICAL SYSTEM SCHEMATIC

All electrical switches and fuses are located on the electrical panel which is installed on the upper left side of the cabin. Additional spare fuses are also provided in the panel and can be used for replacement during flight if necessary.

A red master switch controls all electrical power from the battery and alternator to the distribution bus with the exception of the engine magnetos.

NOTE

Failure to turn the master switch OFF after securing the aircraft will result in a complete discharge of the battery.

The alternator circuit includes an overvoltage relay which automatically removes it from the circuit to prevent damage to the alternator or the radio equipment should an overvoltage condition occur. Cycling the master switch will reset the overvoltage relay should it drop the alternator off the circuit due to an overvoltage condition. This is indicated by a discharge on the ammeter. After resetting, if the overvoltage condition was temporary, the alternator will continue to operate normally.

FUEL SYSTEM

The Citabria fuel system is completely independent from the other aircraft systems and due to its simplicity is virtually trouble free. See Figure 6-5.

Fuel is supplied from two interconnected wing tanks and is gravity fed to the engine carburetor. Fuel quantity is registered by two direct reading float-type gauges, one for each tank. They are located in each wing root area of the cabin.

NOTE

Correct fuel indication is only provided with the aircraft in level flight attitude.

The fuel shut-off valve is located on the lower left side of the cabin forward of the pilot. Two positions are available, ON or OFF. A gascolator is mounted to the firewall with a quick drain feature provided. The quick drain control knob is located through the inspection door on the engine cowl. An additional drain is located under the fuselage aft of the baggage compartment and is easily accessible during the preflight inspection.

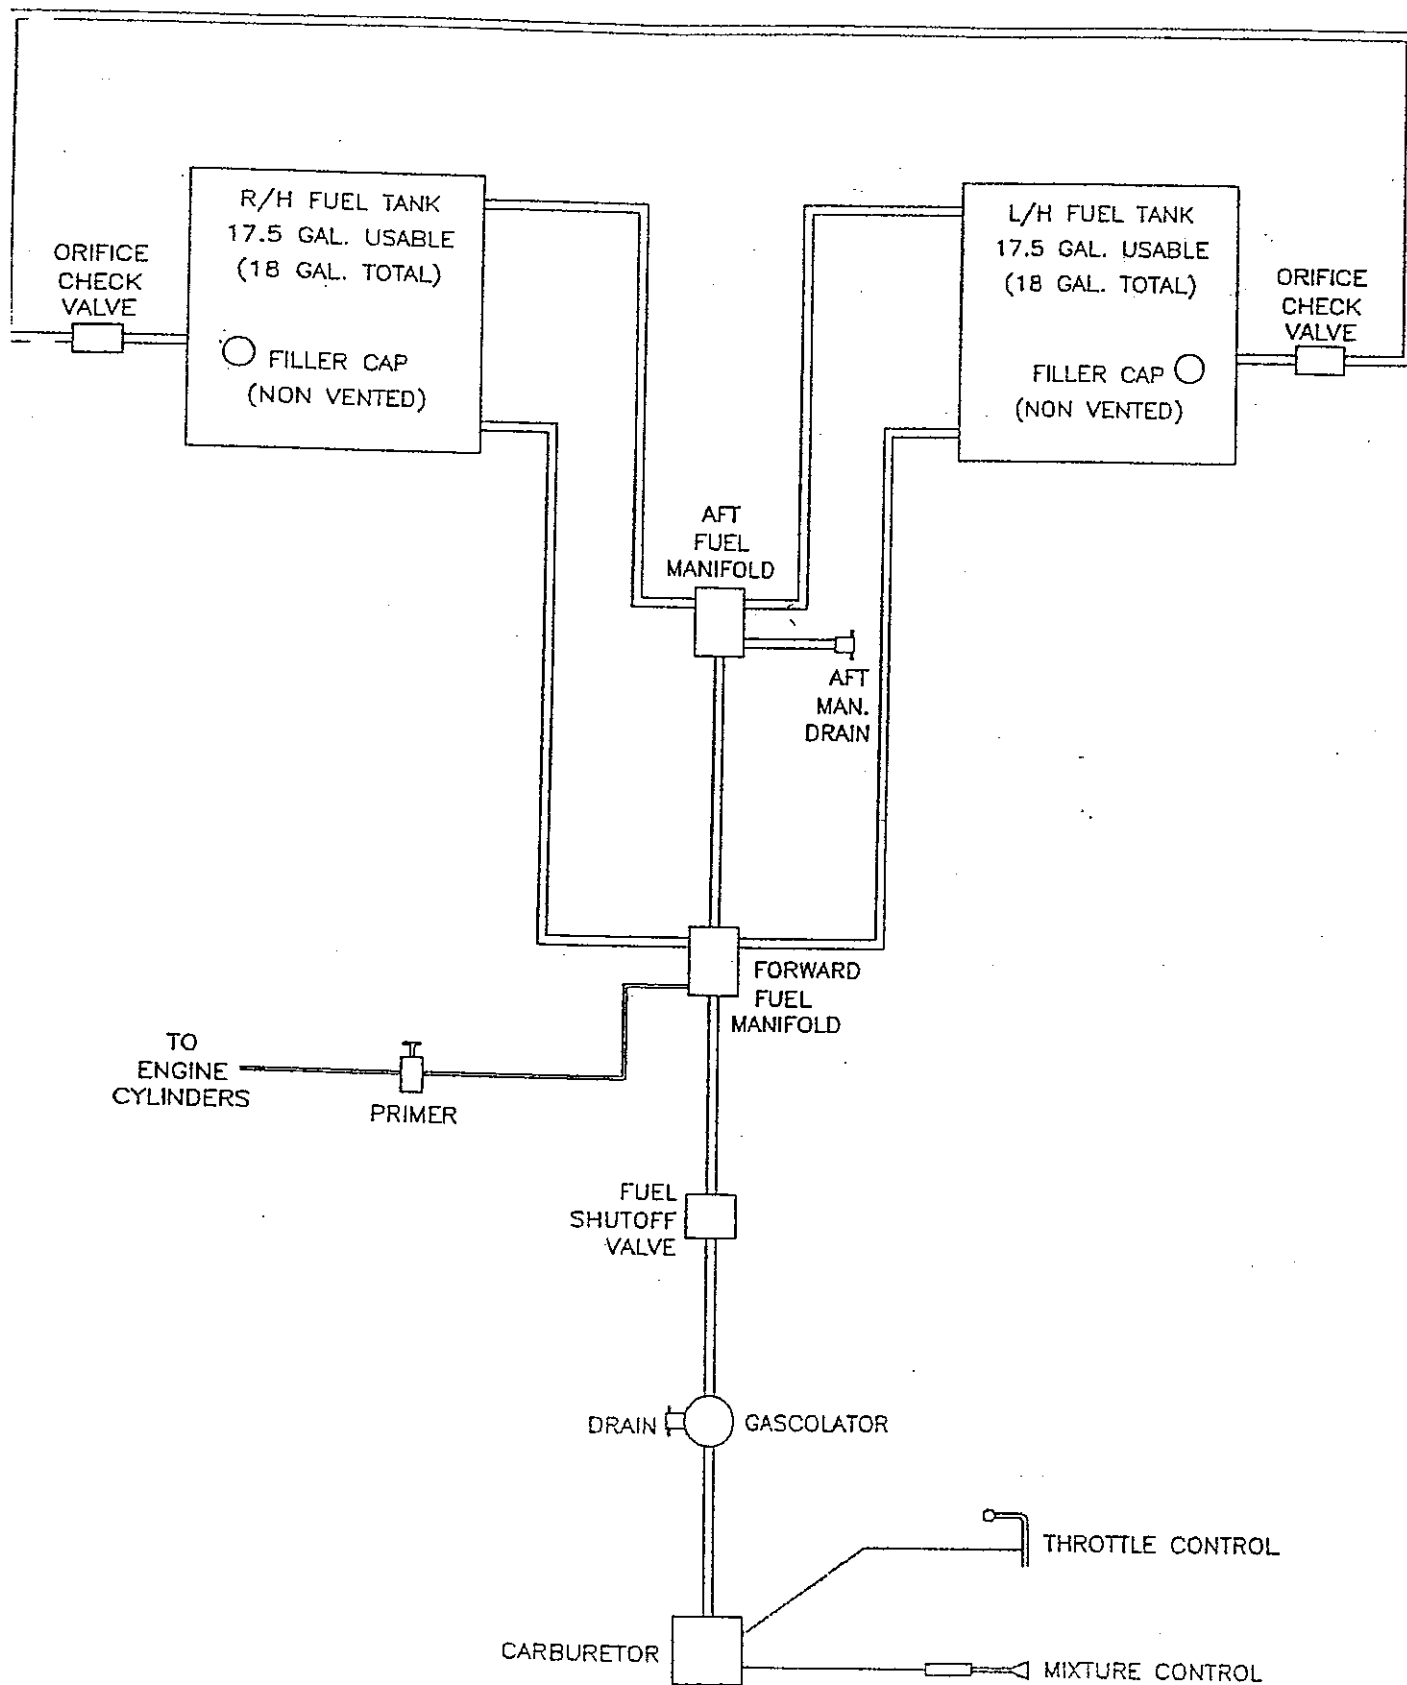


FIGURE 6-5 FUEL SCHEMATIC

Citabria

The fuel tanks are vented together with the vent located on the left wing. An orificed one-way check valve allows a minimum of fuel to be vented overboard during negative G aerobatic maneuvers. An ice defleccraft inadvertently encounter icing conditions.

WARNING

The fuel caps are the non-vented type. Failure to properly secure the caps will result in fuel leakage and unequal fuel feed between the two tanks during flight.

An engine fuel primer is located on the instrument panel to facilitate starting. Turn the knob to release the plunger then pump the desired amount.

WARNING

After using the primer, insure that the knob is locked in place to prevent Additional fuel from entering the engine cylinders.

The 7KCAB only, is fuel injected and has additional provisions for limited inverted flight. See Figure 6-5. This includes an engine driven fuel pump and an electric boost pump, which is used for starting and for emergency use should the engine driven pump fail. The switch is located on the electrical panel. A direct reading fuel pressure gauge is, installed in the instrument panel.

A 1.5 gallon header tank is mounted aft of the firewall. A standpipe in the tank allows .75 gallons to be used for inverted flight which is approximately 2-3 minutes depending on power settings. During positive G conditions, the tank automatically refills by gravity from the main wing tanks.

WARNING

Continuous inverted flight is limited to 2 minutes. Approximately 3.5 minutes of flight under positive G conditions is required to completely refill the header tank. Temporary fuel starvation may result during an extended series for aerobatic maneuvers involving a majority of negative G conditions.

NOTE

Should fuel starvation result during inverted flight, return to positive G conditions. The engine will restart within 10 seconds.

HEATING AND VENTILATION

Heat is obtained from a heat muff attached to the engine exhaust manifold. Both the front and rear seat control knobs are located on the lower left side of the instrument panel. The front seat heat outlet is on the left side of the firewall and the rear seat outlet is mounted to the cabin floor between the two seats.

Fresh air is obtained by two rotatable air scoops on both sides of the cabin forward of the pilot. Adjust the scoop forward for fresh air intake and rearward for air exhaust.

Additional fresh air vents are located in the left and right wing roots. Air flow is adjusted by rotating the valve as desired.

AIRCRAFT LIGHTING

All light switches are located on the electrical panel. The interior light is located on the upper left side of the cabin. It is detachable and equipped with a long coiled chord for mobility. The light has both a clear and a red lense with an adjustable beam. The intensity is controlled by a rheostat which is located on the back of the light fixture.

The exterior lights include the standard navigation lights on the wing tips and rudder. High intensity wing tip strobe lights are optional.

NOTE

The strobe lights should not be used during ground operations due to the high intensity having a blinding effect on other aircraft and personnel in the area. This also holds true during flight in haze or fog due to possible distraction to the pilot.

The high intensity landing/taxi light is mounted in the engine cowl below the propeller.

FLIGHT INSTRUMENTS

The flight instruments are conventional in design and are mounted in either the low or the high type panel. The high panel has ample space for a variety of gyro instruments and avionics.

The airspeed, sensitive altimeter and the vertical speed indicator are all pressure sensitive instruments operating off the pitot-static system. The pitot-static openings are attached to the right wing jury strut.

The artificial horizon and directional gyro are vacuum operated using an engine driven vacuum pump with a vacuum gauge to indicate system pressure.

The turn coordinator is electrically driven with the ON-OFF switch located on the electrical panel.

The magnetic compass, clock, outside air temperature gauge and accelerometer are all independent units requiring no external power source.

A stall warning horn, if installed, activated by a vane type switch on the leading edge of the wing is provided to warn the pilot of an approaching stall. It is pre-set for 5 to 10 MPH above the actual stalling speed with engine power at idle. The master switch must be ON for operation.

AVIONICS

The Citabria is available with a variety of navigation and communication equipment. Each radio is equipped with a separate switch on the electrical panel in addition to the switch that is an integral part of the radio. A radio speaker is mounted in the right wing root of the cabin with microphone and headset jacks on the left side of the instrument panel. Consult the respective manufacturer for specific operating instructions.

An emergency locator transmitter (ELT) is located on the right side of the baggage compartment. It is self-contained and is automatically activated to transmit a homing signal on 121.5 MHz and 243.0 MHz should the aircraft be subjected to rapid or abrupt deceleration.

For automatic activation, the switch on top of the ELT must be in the "ARM" position. The radio can be manually activated and checked by switching to the "ON" position and tuning the communication receiver to 121.5 MHz. A variable pitch tone indicates normal operation. To re-set or deactivate the ELT, place the switch in the "OFF" position then return to the "ARM" position for automatic activation.

NOTE

Maximum range of the ELT is best achieved by removing the unit from the aircraft and placing the antenna in the upright position and as high as possible.

